 


DIE CUT (Do Not Print)

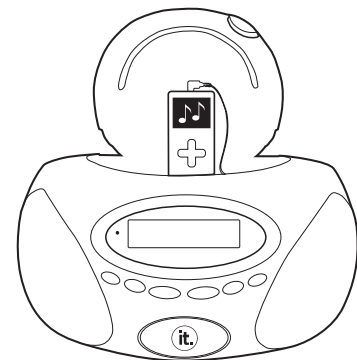

ITBB-600 INSTRUCTION MANUAL

NOTE: Please read and follow these instructions before using your unit.


WARNING

TO PREVENT ELECTRIC SHOCK; DO NOT USE THIS PLUG WITH AN EXTENSION CORD RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADES EXPOSURE.
TO PREVENT FIRE OR SHOCK HAZARD; DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
The lightning flash with arrowhead symbol, with an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.	CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

1

 LOCATION OF CONTROLS

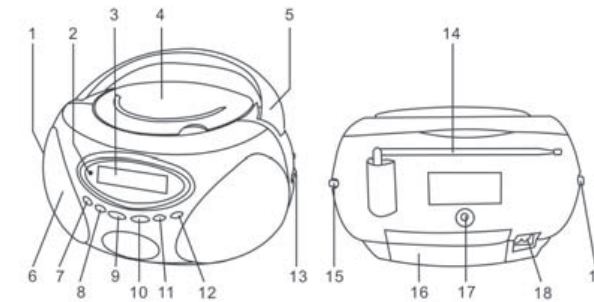

- | | |
|-------------------------|-------------------------|
| 1. Volume Control Knob | 11. Minute Set Button |
| 2. FM Stereo Indicator | 12. Clock Button |
| 3. LCD Display | 13. Tuning Control Knob |
| 4. Aux-In Cord (Inside) | 14. Antenna |
| 5. Handle | 15. Band Switch |
| 6. Speaker | 16. Battery Compartment |
| 7. Time Set Button | 17. Phones Jack |
| 8. Alarm Set Button | 18. AC Socket |
| 9. Alarm On/Off Button | 19. Function Switch |
| 10. Hour Set Button | |

2

POWERING UNIT BY BATTERY

Insert 6 x 1.5V size 'C' batteries into the battery compartment of the unit. Be sure to observe the proper polarity as indicated inside the battery compartment.

POWERING UNIT BY AC LINE CORD

Plug one end of the AC line cord into the DC power Input, and then plug the other end into AC wall outlet. Before switching on the unit, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate.

SETTING THE CORRECT TIME

- Set the Function Switch to **AUTO** or **AUX** position.
- Press and hold the **Time Set** button, then press the **Hour Set** button to set the hour.
- Press and hold the **Time Set** button, then press the **Minute Set** button to set the minute.
- Release all buttons when the correct time is set.

SETTING THE ALARM TIME

- Set the Function Switch to **AUTO** or **AUX** position.
- Press and hold the **Alarm Set** button "AL" will show on the right lower corner of the LCD display, then press the **Hour Set** button to set the alarm hour.
- Press and hold the **Alarm Set** button, then press the **Minute Set** button to set the alarm minute.
- Release all buttons when the correct time is set.

3

LISTENING TO THE AM/FM RADIO

- Set the Function switch to **RADIO** position.
- Set the Band switch AM or FM position.
- Turn the Tuning Control knob to your desired radio station.
- Adjust the sound level by rotating the Volume Control knob.

FM STEREO INDICATOR

When turned to a FM stereo broadcast the "FM ST." LED Indicator will light up.

ANTENNA

For best reception, fully extend the FM Antenna to receive FM stations. For AM reception, the unit has a built-in antenna, turn the whole unit for best reception.

RADIO WAKE UP FUNCTION

- Select the desired radio station and adjust the volume to the desired level.
- Set the Function switch to **AUTO** position.
- Set the alarm time as indicated at the SET THE ALARM TIME section.
- Press the **AL. On/Off** button to activate the alarm function. The alarm icon will show on the top right corner of the LCD display indicating that the alarm is ON.
- The radio will turn on at the pre-selected alarm time.
- To cancel the alarm, press the **AL. On/Off** button, the alarm icon will disappear on the LCD display.

CLOCK DISPLAY

To check the current time during listening to radio, simply press the **Clock** button, the current time will show on the LCD display.

4

STEREO HEADPHONE JACK

For private listening, insert the plug of a stereo headphone into the Stereo Headphone Jack and adjust the Volume Control knob accordingly. During the use of a headphone, the speakers are automatically disconnected.

AUX IN CONNECTION

- Plug the Aux-in cord into the line-out jack or phones jack on your MP3 player.
- Turn on the unit and set the Function Switch to **AUX** position.
- Turn on your MP3 player and follow its playback instruction.
- To stop this function, simply turned off your MP3 player.

SPECIFICATIONS

Frequency Range	AM 530 - 1710 KHz FM 88 - 108 MHz
Power Supply:	AC 120V ~ 60Hz
Made in China	



Specifications are subject to change without prior notice.

5

Innovative Technology Electronics Corp.

Limited Warranty
90 Days Labor, One Year Parts

Innovative Technology Electronics Corp. (IT) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. IT agrees, within the initial "90 Day" period, to repair the product if it is determined to be defective at "No Charge". It is further agreed that IT will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

To obtain service, the original purchaser MUST present a sales receipt / proof of purchase indicating date of purchase, amount paid, and place of purchase. Send the unit prepaid to the address below in the original packaging or reasonable substitute to prevent damage. You "Must" include your full name, shipping address and telephone number. No return will be shipped back to a PO Box. Please include your check or money order in the amount of \$12.00, payable to Innovative Technology Electronics Corp. to cover handling and return shipping charges. (IT) will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information.

Send all inquires or returns to:
Customer Service Dept.
Innovative Technology Electronics Corp.
4 Anchor Way, Port Washington, NY 11050
Tel : 1-877-ITECH-97 (1-877-483-2497)
EMAIL: support@ithomeproducts.com

There are no express warranties except as listed above.

6

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. (IT) SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Model #: ITBB-600
©2009 Innovative Technology.
4 Anchor Way,
Port Washington, NY 11050
www.ithomeproducts.com