

OPERATING MANUAL



Made for
 iPod  iPhone



MODEL: ITR-155iP
ULTIMATE MP3 DOCKING STATION
Compatible with iPhone[®], iPod[®] & MP3 Players

* "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

** iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

Important Safety Instructions

When using electrical products, basic precautions should always be followed including:

1. **Read Instructions** - All the safety and operating instructions should be read before the product is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Instructions** - All warnings on the product and in the operating instructions should be adhered to
4. **Follow Instructions** - All operating and user instructions should be followed.
5. **Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. **Attachments** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. **Water and Moisture** - Do not use this product near water-for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.
8. **Accessories** - Do not place this product on an unstable surface. The product may fall, causing serious injury to a child or adult and serious damage to the product. Use only with a stand, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
9. **Transporting** - This product should be moved with care to avoid damage or injury.
10. **Ventilation** - Slots and openings in the cabinet are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
11. **Power Sources** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operation instructions.
12. **Main Plug** - The main plug is used as the disconnect device, the disconnect device shall remain readily accessible.
13. **Power - Cord Protection** - Power-supply cords should be routed so that they are not likely to be trapped in any way.
14. **Lightning** - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
15. **Power Lines** - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
16. **Overloading** - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
17. **Object and Liquid Entry** - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. The apparatus shall not be exposed to dripping or splashing, and an object filled with liquids such as a vase of flowers, shall be placed on the apparatus.
18. **Servicing** - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.



19. **Damage Requiring Service** - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
- a. If the power-supply cord or plug is damaged.
 - b. If liquid has spilled, or objects have fallen into the product.
 - c. If the product has been exposed to rain or water.
 - d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e. If the product has been dropped or damaged in any way, and the product exhibits a distinct change in performance-this indicates a need for service.
20. **Replacement Parts** - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
21. **Safety Check** - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
23. **Heat** - The product should be situated away from heat sources such as radiators, heat registers, stoves or other products (including amplifiers) that produce heat.

Warning: To reduce the risk of fire or electrical shock, do not exposed the apparatus to rain or moisture. No naked flame sources such as candles shall be placed on top of the apparatus.

 
 
Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this device.

Caution: Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous exposure.


Introduction

This appliance is suitable for a joyful get-together or a small party. The small portable design and good sound quality will make your get-together or party more lively and joyful.

Layouts

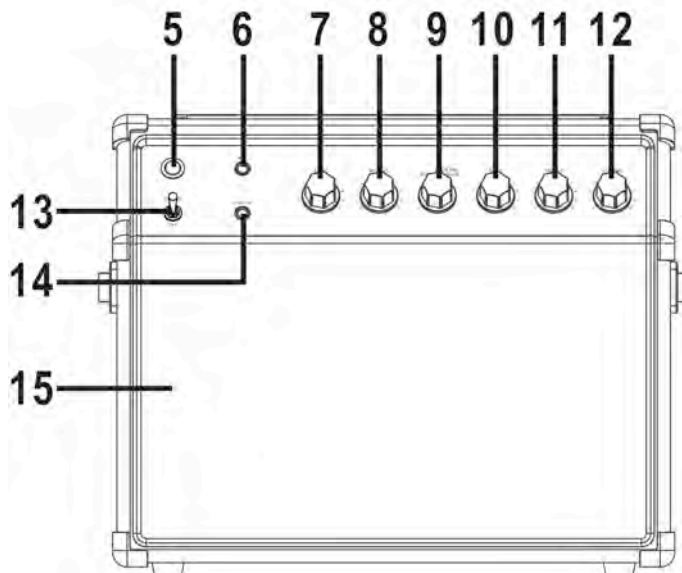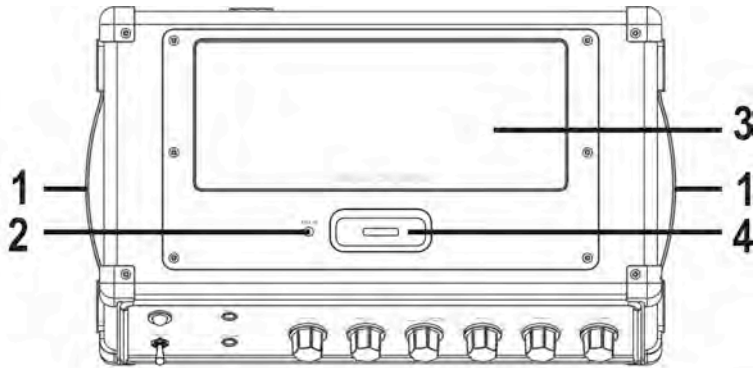

 1. HAND STRAP
2. AUX IN SOCKET
3. MICROPHONE STORAGE COMPARTMENT
4. Dock for iPod/iPhone
5. POWER INDICATOR
6. MIC SOCKET
7. ECHO KNOB
8. MIC/GUITAR VOL KNOB
9. iPod / AUX IN TOP/BACK SWITCH
10. BASS KNOB
11. TREBLE KNOB
12. VOLUME KNOB
13. POWER ON/OFF TOGGLE SWITCH
14. GUITAR SOCKET
15. SPEAKER

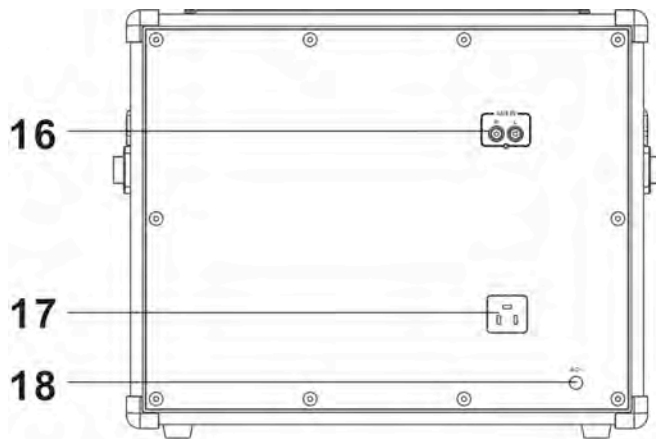

- 16. AUX IN SOCKET
- 17. EXTERNAL AC SOCKET (SUPPLY POWER TO EXTERNAL DEVICE)
- 18. AC CORD

Accessories

The product contains accessories listed below:

- RCA CABLE FOR AUX IN;
- Φ3.5 SOCKET CABLE FOR AUX IN;
- 5 DOCK ADAPTORS, No.: 9, 10, 12, 14, 15.

Basic Operation

POWER SUPPLY

Connect the AC power cord to the household outlet on the wall.

AC SOCKET

This apparatus can provide a 120V ~ 60Hz AC source to a unit which connected to the apparatus.

Connect the AC plug of an external audio device into the AC socket at rear of the appliance.

AUX PLAYING

An external (auxiliary) audio source (i.e. personal CD/MP3 player) can be connected to this apparatus and channel the sound output.

- RCA socket at rear of the appliance;
- 3.5mm socket on top of the appliance.

1. Plug the detachable AUX cable into the AUX IN socket on top (or at the rear) of the appliance.
2. Plug the other end of the AUX cable into the headphone or Line Out socket of the external source.
3. Switch the POWER ON/OFF toggle switch to "ON" position and the power indicator will light up.
4. Turn the iPod / AUX IN TOP/BACK switch to AUX TOP (or BACK) position.
5. Sound quality control:
 - Rotate the VOLUME knob to adjust the sound level.
 - Rotate the BASS knob to adjust the bass tone.
 - Rotate the TREBLE knob to adjust the treble tone.
6. Turn off the POWER ON/OFF toggle switch to turn off the appliance.

PLAYING for iPod/iPhone

Through the use of interchangeable inserts called Dock Adaptors, you can dock your iPod/iPhone on this appliance.

This unit includes Dock Adaptors as follows:

- #9: iPod with video (30GB only)
iPod classic (80GB, 120GB only)

- #10 iPod with video (60GB, 80GB only)
iPod classic (160GB only)

- #12 iPhone (4GB, 8GB, 16GB only)

- #14 iPod touch (1st generation) (8GB, 16GB only)

- #15 iPhone 3G (8GB, 16GB only)
iPhone 3GS (16GB, 32GB only)

Before docking your iPod/iPhone you must first check your iPod/iPhone has a docking connector. The docking connector is located on the base of the iPod/iPhone.

Also you must first fit the correct iPod/iPhone adaptor on the Dock. Each iPod/iPhone adaptor matches the shape of a particular iPod/iPhone and is necessary to ensure that your iPod/iPhone is held securely when docked.

Made for

- | | |
|---|--|
| <ul style="list-style-type: none">• iPod nano (5th generation)• iPod nano (4th generation)• iPod nano (3rd generation)• iPod nano (2nd generation)• iPod nano (1st generation)• iPod touch (3rd generation)• iPod touch (2nd generation)• iPod touch (1st generation)• iPod classic | <ul style="list-style-type: none">• iPod with video• iPod with color display• iPod with click wheel• iPod mini
• iPhone 3GS• iPhone 3G• iPhone |
|---|--|

 
NOTE:

- Use the adaptor that is supplied with the iPod/iPhone or a commercially available one to use the other types of iPod/iPhone.
- Do not dock an iPod/iPhone without fitting the correct adaptor otherwise you may damage the iPod/iPhone and your unit.
- When docked the iPod/iPhone, the charging current is 500mA.

INSERT THE ADAPTOR INTO THE ITR-155IP DOCK

Fit the front edge of the adaptor into the Dock, and then press the back edge of the adaptor onto the Dock until a slight "click" is heard indicating the adaptor is inserted correctly.

- To remove the adaptor, hold its left and right sides and gently pull it up.

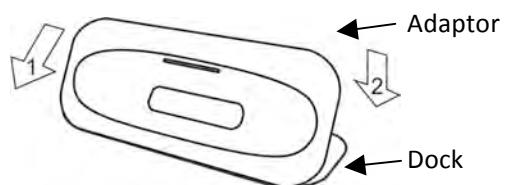

1. Plug the POWER ON/OFF toggle switch to "ON" position when power indicator will light up.
2. Connect your iPod/iPhone to the apparatus with a proper dock adaptor.
3. Turn on your iPod/iPhone.
4. Turn the iPod / AUX IN TOP/BACK switch to iPod position.
5. Sound quality control:
 - Rotate VOLUME knob to adjust the sound level.
 - Rotate the BASS knob to adjust the bass tone.
 - Rotate the TREBLE knob to adjust the treble tone.
6. Turn off the POWER ON/OFF switch to turn off the appliance.

GUITAR PLAYING

1. Plug the guitar plug (not included) into the GUITAR socket on the front panel.
2. Switch the POWER ON/OFF toggle switch to "ON" position when power indicator will light up.
3. Sound quality control:
 - Rotate VOLUME knob to adjust the sound level.
 - Rotate the MIC/GUITAR VOL knob to adjust the guitar sound level.
 - Rotate the ECHO knob to adjust the guitar echo tone.

MIC OPERATION

1. Plug a microphone (not included) into the MIC socket on the front panel.
2. Switch the POWER ON/OFF toggle switch to "ON" position when power indicator will light up.
3. Sound quality control:
 - Rotate the VOLUME knob to adjust the sound level.
 - Rotate the MIC/GUITAR VOL knob to adjust the microphone sound level.
 - Rotate the ECHO knob to adjust the echo tone.

Specifications

Power Supply: AC 120V ~ 60Hz

AC Output: 120V ~ 60Hz

Speaker: 4 ohm, 30 W

MAX. Power Consumption: 40 W

Design and specification are subject to change without notice.



Instructions shall caution users that modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

The following or equivalent as appropriate:

"NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help."

Statement that the product complies with Part 15 (i.e. "This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.")

CALIFORNIA PROP 65 WARNING

"WARNING" This product contains a chemicals known to the State of California to cause birth defects or other reproductive harm. For more information on these regulations and a list of chemicals, log on the following website address :

<http://www.oehha.ca.gov/prop65.html>

**Innovative Technology Electronics Corp.
Limited Warranty
90 Days Labor, One Year Parts**

Innovative Technology Electronics Corp. (IT) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. IT agrees, within the initial "90 Day" period, to repair the product if it is determined to be defective at "No Charge". It is further agreed that IT will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

To obtain service, the original purchaser MUST present a sales receipt / proof of purchase indicating date of purchase, amount paid, and place of purchase. Send the unit prepaid to the address below in the original packaging or reasonable substitute to prevent damage. You "Must" include your full name, shipping address and telephone number. No return will be shipped back to a PO Box. Please include your check or money order in the amount of \$12.00, payable to Innovative Technology Electronics Corp. to cover handling and return shipping charges. (IT) will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information.

Send all inquires or returns to:

Customer Service Dept.
Innovative Technology Electronics Corp
1 Channel Drive, Port Washington, NY 11050
TOLL FREE# 1-877-ITECH-97 (1-877-483-2497)
Website: www.ithomeproducts.com
Support's email address: support@ithomeproducts.com

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER, (IT) SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

155iP100600E