

VERY IMPORTANT! PLEASE FOLLOW INSTRUCTIONS BEFORE USING THIS TURNTABLE.

OPERATION STEPS

1. On the back of the unit, using the POWER BUTTON, turn the unit ON. Push the FUNCTION SELECTION SWITCH to the PHONO setting. Place a record on the TURNTABLE PLATTER. Select the desired speed (33 1/3, 45, 78) by sliding the SPEED SELECTION SWITCH according to the record.

NOTE: When playing a 45 RPM record, use the included 45 RPM ADAPTOR.

2. Open the TONE ARM CLIP to release the TONE ARM. Push the LIFT LEVER backwards to raise the arm. Gently move the tone arm to the desired position over the record. The turntable will begin to spin when the arm is moved toward the record. Push the lift lever forward to lower the arm slowly onto the desired position on the record to begin playing.

3. If the AUTO / MANUAL STOP SELECTION SWITCH is turned ON, the record will stop automatically when finished. If this switch is turned OFF, the record will continue to spin when finished playing.
NOTE: If Auto Stop is turned OFF the TURNTABLE PLATTER will spin as soon as the unit is set to PHONO mode.

