



Bluetooth® Wooden Stereo with AM/FM Radio and CD Player

Model: ITVS-1350



Instruction Manual

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE USE
AND KEEP IT FOR FUTURE REFERENCE.

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS.....	1
BEFORE USE.....	3
STEREO PARTS AND FUNCTIONS	4
BASIC OPERATION	5
CLEANING A COMPACT DISC.....	6
LISTENING TO A CD	7
REPEAT / PROGRAMMING FUNCTION	8
LISTENING TO THE RADIO.....	9
LISTENING TO AUDIO VIA BLUETOOTH	9
SPECIFICATIONS	10
TROUBLESHOOTING GUIDE.....	11
FCC STATEMENT	13
INDUSTRY CANADA.....	13
CALIFORNIA PROP 65 WARNING	13
WARRANTY	14



The lightning flash with arrowhead within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO PREVENT RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

WARNING: To prevent electric shock, do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure



WARNING: Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to laser beam.

PRODUCT COMPLIES WITH DHHS RULE 21 CFR SUBCHAPTER J IN EFFECT AT DATE OF MANUFACTURE



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.



14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15.



-This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock. -Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel. -The exclamation point within and equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

16.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

17. The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
18. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.
19. The use of the equipment in moderate climate.

BEFORE USE

Choose unit installation location carefully. Avoid placing it in direct sunlight or close to a source of heat. Also avoid locations subject to vibrations and excessive dust, cold or moisture. Keep away from sources that hum, such as transformers or motors.

Do not open the cabinet as this might result in damage to the circuitry or electrical shock, if a foreign object should get into the set, contact your dealer.

Be sure not to handle discs with dirty fingers. Never insert a disc that has a crack on the surface.

When removing the power plug from the wall outlet, always pull directly on the plug, never pull the cord.

To keep the laser pickup clean, do not touch it, and do not forget to close the disc tray.

Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry cloth.

 
In order to shut off the power to this product completely, unplug the power cord from the wall outlet. Be sure to unplug the unit if you do not intend to use it for an extended period of time, such as a vacation.

Keep this manual in a safe place for future reference.


BEWARE OF CONDENSATION

When the player (or a compact disc) is moved from a cold to a warm place or is used after a sudden temperature change, there is a danger of condensation. Water vapor in the air could condense on the mechanism or the laser pickup. If droplets of water form on these parts, correct playback will be impossible because the laser cannot read the information from the disc correctly. To prevent this, if you are going to use the player in a condition where condensation could occur, you should leave the player for 1 or 2 hours after plugging it into an AC outlet depending on the amount of condensation. If this is done, the player will stabilize at the temperature of its surroundings.

STEREO PARTS AND FUNCTIONS

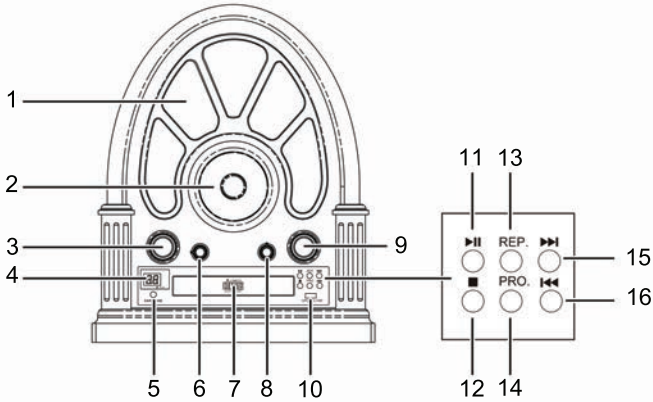


 1. SPEAKER
2. AM/FM TUNER DIAL
3. ON / OFF / VOLUME KNOB
4. LED DISPLAY
5. EARPHONE / HEADPHONE JACK
6. TONE KNOB
7. CD TRAY
8. FUNCTION SELECTION KNOB (FM/AM/CD/BT)
9. AM/FM TUNING KNOB
10. CD TRAY OPEN / CLOSE BUTTON
11. PLAY / PAUSE BUTTON
12. STOP BUTTON
13. REPEAT BUTTON
14. PROGRAM BUTTON
15. FAST FORWARD BUTTON
16. REWIND BUTTON
17. FM ANTENNA
18. AC PLUG / POWER CORD


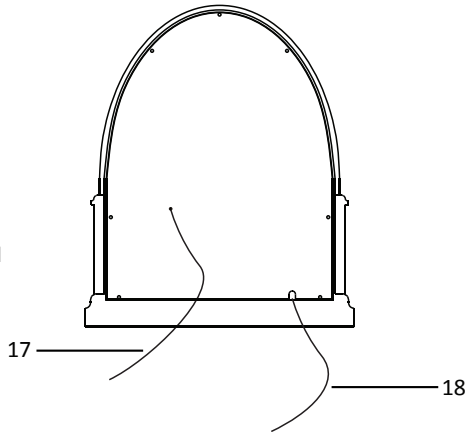


BASIC OPERATION

 1. Plug the power cord into a wall outlet.
Power on the unit by turning the ON / OFF / VOLUME KNOB clockwise.

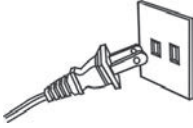

  
2. Select the source using the FUNCTION SELECTION knob.

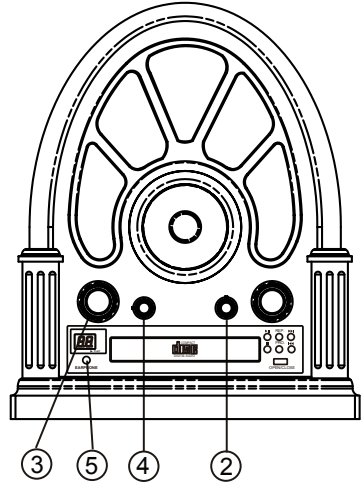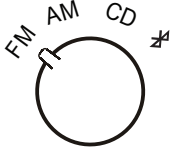


3. Rotate the VOLUME knob clockwise to adjust to desired sound level.



 4. Rotate the TONE knob clockwise or counter clockwise to adjust the tone.

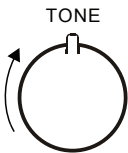

 
5. To listen to the unit using headphones, insert headphone jack into EARPHONE port.

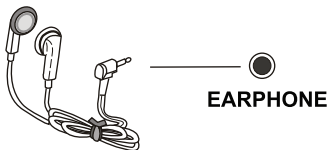


CLEANING A COMPACT DISC

Handling the Discs:


This unit has been designed specifically for sound reproduction from compact discs bearing the  mark. No other discs can be used.

 1. Always place the compact disc in the disc tray with the label facing upward.
NOTE: Compact discs can ONLY be played only on one side.
2. To remove a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edge.

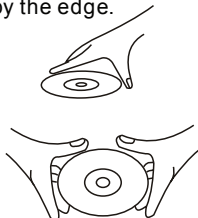

HANDLE DISC ONLY AS SHOWN

 3. Fingerprints and dust should be carefully wiped off the disc recorded surface with a clean cloth (not included).


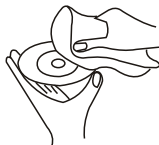


CLEAN FROM CENTRE TO EDGE


4. Never use chemicals such as: record sprays, anti-static sprays or fluid, benzene or thinner to clean compact discs. Such chemicals will do irreparable damage to the disc's plastic surface.
5. Discs should be returned to their cases after use to avoid serious scratches that could cause the laser pick up to skip.
6. Do not expose discs to direct sunlight or high humidity and temperature for extended periods.
7. Do not stick paper or write anything with a ballpoint pen on the surface of the label side.
8. Do not use irregular shaped CD's (octagonal, heart-shape, etc.), all of which can damage the unit.

LISTENING TO A CD

  1. Rotate the FUNCTION knob to select the CD function.

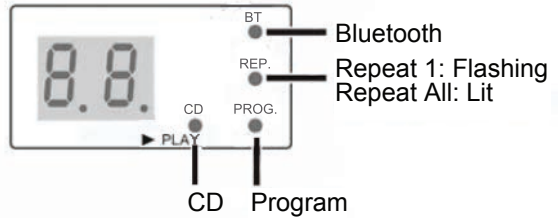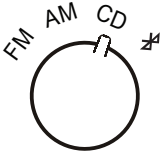

 2. Press the OPEN/CLOSE button to open the tray, and place the CD on the tray. Press the OPEN/CLOSE button again to close the tray.



CD should be placed on the tray with the label side up.



3. The CD will start playing from the first track.
Or press PLAY/PAUSE button to start playback.



4. Press the Fast Forward button once to go to the next track.



5. Press the REWIND button once to go back to the start of the current track.
Press the REWIND button twice to go back to the start of the previous track.



6. You can rewind or fast forward to any point in a selected track by pushing and holding the REWIND or FAST FORWARD button.

NOTE: Do not push both buttons together as this may damage the unit. As the unit is tracking quickly forward or backward, you will hear your selection playing at a distorted speed. Simply release the depressed button to continue playing at normal speed at the desired position in the selected track.

7. Press the PLAY/PAUSE button to pause the CD.
(The CD indicator will not illuminate.)



Press the PLAY/PAUSE button again to resume playback.
(The CD indicator will remain lit.)

NOTE: Do not switch the unit off while playing a CD as this will damage the unit.

8. Press the STOP button to stop the CD from playing.



REPEAT / PROGRAMMING FUNCTION

REPEAT PLAY:

-Press the REPEAT button to step through the available repeat modes – **REPEAT 1**, **REPEAT ALL** or **OFF**.

REPEAT 1: Continuously repeat the current track, the repeat indicator will flash.

REPEAT ALL: Repeat the entire disc continuously, the repeat indicator will remain lit.

When REPEAT is **OFF:** Repeat indicator will not be illuminated.

NOTE: When the CD is stopped, the repeat modes will be cleared.

PROGRAMMED PLAY:

While the disc is stopped, you can store a programmed selection from the disc in your preferred sequence.

TO SET A PROGRAM:

1. Press STOP button to stop the CD from playing.
2. Press PROGRAM button.
 - LED indicator will light up and the '01' will start flashing on the display indicating the position of the track in the program.
3. Select a track you want to program by pressing the FAST FORWARD or REWIND button.
4. To save this track into the program sequence, press the PROGRAM button again.
 - '02' will start flashing on the display indicating the second track in the program.
5. Repeat step 3 and 4 until you have stored all the tracks in the program sequence.

NOTE: During program setting, DO NOT press the STOP button unless you want to reset the programming from the beginning.

PLAYING THE PROGRAMMED SELECTION:

Press the PLAY/PAUSE button to start playing the program.

SELECTING TRACKS:

You can navigate through the tracks stored in the program by pressing the FAST FORWARD or REWIND button.

-Press the FAST FORWARD button once to go to the start of the next track.

-Press the REWIND button once to go back to the start of the previous track.

TO CLEAR THE SET PROGRAM:

Press the STOP button to stop the programmed playlist.

 
Press the STOP button again to clear the program. LED indicator will not illuminate.

REPEAT MODES:



Repeat modes may be selected when a program is playing.

LISTENING TO THE RADIO

1. Rotate the FUNCTION knob to select the FM or AM function.

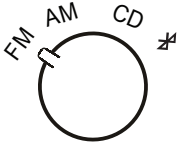

  2. Tune to the desired frequency.

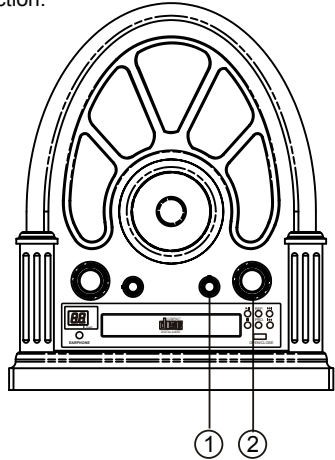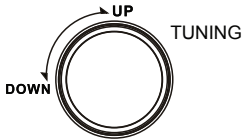


ADJUSTING FOR BEST RECEPTION

- FM broadcast: Extend and reposition the FM antenna.
- AM broadcast: Rotate the unit to find the best position.

LISTENING TO AUDIO VIA BLUETOOTH

This unit has a built-in Bluetooth feature to listen to audio from external devices.

 1. Rotate the FUNCTION knob to select BT function. The BT indicator will begin flashing.

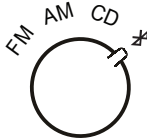

2. Set the Bluetooth function on your external device.
3. Search for the unit on your external device.
NOTE: The effective distance between your external device and this unit is 10 meters (33 ft).
4. Select "ITVS-1350" on your device list.
If a password is required on your external device, use "0000".
5. Select the music player program on your external device and press play on the desired song.
NOTE: Fast forward / rewind is only available on your external device.

SPECIFICATIONS

AMPLIFIER

Output Power 1 × 2.0W
Frequency Response..... 60 to 20, 000 Hz

RADIO

FM Section
Frequency Range 88 to 108 MHz
AM Section
Frequency Range 520 to 1710 KHz

CD PLAYER

Frequency Response 60 to 20, 000 Hz +/- 4 dB
Signal-to-Noise Ratio..... 55 dB (IEC-A)

SPEAKER SYSTEM

Type 1-way
Impedance 4 ohms
Input Power Max.10W

GENERAL

Power Requirements AC 120V~ 60Hz
Power Consumption 20 W
Dimensions(WxHxD)..... 11.8×9.4×14in (30×24×35.5cm) (approx.)
Weight 9.9 lbs. (approx.)
Standard Accessories Operating Instruction Booklet

BLUETOOTH

Bluetooth Version Bluetooth V2.1+EDR
Bluetooth Profiles A2DP, AVRCP, GAVDP, HFP, HSP, IOP
Bluetooth Frequency range 2.402GHz-2.480GHz
Operating Distance..... 10 meters (33 ft.)

TROUBLESHOOTING GUIDE

To troubleshoot the unit, please see chart below for solutions.

	Problem	Cause	Solution
THE ENTIRE UNIT	Power does not come on when the power switch is pressed.	Unit is unplugged.	Connect the unit to the AC power supply.
	No sound comes out of the speaker.	The volume is turned down (to MIN). The input selector does not match the playback source.	Adjust the volume. Reselect the desired input source.
	The sound is noisy.	The unit is too close to a TV set or another similar appliance.	Turn off the TV or other appliance and relocate the unit.
RADIO	Cannot listen to any station, or signal appears weak.	-The station is not tuned-in properly. -A TV set is being used nearby and is interfering with the radio reception.	-Properly tune-in the desired station. -Turn off the interfering TV set.
	The sound is distorted.	The antenna is not oriented properly.	Re-orient the antenna until reception improves.
CD PLAYER	CD stops immediately after starting, or unit pauses or stops during play.	-The CD is inserted upside down. -The CD is dusty. -There is condensation on the CD.	-Insert the CD with the printed side right-side up. -Carefully clean and dry the CD.
	No sound.	The CD player is paused.	Press the PLAY/PAUSE button.
	Specific CD is noisy, or playback stops or skips.	-The CD is scratched, damaged or warped. -The CD is very dirty.	-The CD should be changed. -Carefully clean the CD.

Problem		Cause	Solution
BLUETOOTH	No sound.	<ul style="list-style-type: none"> -The unit is not switched to Bluetooth mode. -Your device's and/or unit's volume is not turned up. -Your device is too far from the unit or there are some obstacles between your device and the unit. 	<ul style="list-style-type: none"> -Ensure the unit is switched to BT mode. -Move your Bluetooth device closer to unit. -Turn up the volume on your portable device and/or the unit. -Turn OFF your Bluetooth device and unit. Then power them both back on.
	Sound has a lot of static.	Your device is too far away.	Bring your device closer to the unit.
	Unable to pair with a Bluetooth device.	<ul style="list-style-type: none"> -Your device doesn't have Bluetooth connectivity. -The Bluetooth pairing is not successful. 	<ul style="list-style-type: none"> -Confirm that your device is Bluetooth compatible. -Re-pair the unit and device again.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

INDUSTRY CANADA

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

CALIFORNIA PROP 65 WARNING

"WARNING" This product contains a chemical known to the State of California to cause birth defects or other reproductive harm. For more information on these regulations and a list of chemicals, log on the following website address: <http://www.oehha.ca.gov/prop65.html>

WARRANTY

Innovative Technology Electronics Corp.

Limited Warranty: 90 Days Labor, One Year Parts

Innovative Technology Electronics Corp. (IT) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. IT agrees, within the initial "90 Day" period, to repair or replace the product if it is determined to be defective at "No Charge". It is further agreed that IT will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

To obtain service, the purchaser MUST present an original sales receipt / proof of purchase. Please contact us at www.ithomeproducts.com to request an RMA (Return Material Authorization) number to return products for service or replacement. Returns without an RMA number on the package will be refused and returned to sender. Upon receipt of the returning item and our full inspection (IT) may issue a replacement to customer for the same item or of one that has equivalent value and features. To return an item, supply full name, return address, phone number, item purchased, receipt of purchase and reason for return to obtain RMA number.

All returns must be in the original packaging or reasonable substitute to prevent damage. Customer "Must" include full name, shipping address and telephone number inside of package. No return will be shipped back to a PO Box or APO address.

Please include your check or money order in the amount of:

- **USD \$5.00 for items \$10.00 to \$39.99 (Price Paid Per Unit)**
- **USD \$10.00 for items \$40.00 to \$99.99. (Price Paid Per Unit)**
- **USD \$16.00, for items \$100.00 and up. (Price Paid Per Unit)**
- **Shipping fees are non-refundable**

to be payable to Innovative Technology Electronics Corp. (for handling and return shipping charges) (IT) will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any / all of the necessary information. Send all inquiries or RMA request via our website **www.ithomeproducts.com/support**.

Innovative Technology Electronics Corp.

1 Channel Drive

Port Washington, NY 11050

Toll free: 1-877-483-2497

Website for support: www.ithomeproducts.com/support

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER, (IT) SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Made In China.