

# PLEASE FOLLOW INSTRUCTIONS BEFORE USING THIS TURNTABLE.

## OPERATION STEPS

1. Turn Turntable on by rotating **ON/OFF** knob clockwise. The Red LED will illuminate & be followed by three (3) audible tones signifying it is in **Bluetooth®** mode.

*NOTE:* Turntable will automatically be in Bluetooth mode when it is initially turned on. You are now able to pair your Bluetooth enabled device to the turntable. The pairing name is **Vintage Turntable**.

2. **Turntable Function:**

- Place record on the **Turntable Platter** & select speed (33 1/3, 45, 78) with the **Speed Selection Switch**.  
*NOTE:* **45 RPM Adaptor** is located in the holder near the tone arm.
- Open the **Tone Arm Clip** to release the **Tone Arm**. Push the **Lift Lever** backwards. Move tone arm over record & it will begin to spin. Bluetooth function is now deactivated.
- Push the lift lever forward to lower the arm onto the record to begin playing.

3. **LINE IN (AUX-IN) Function:**

- Plug a 3.5mm cable (not included) to connect an external audio source (CD/MP3 player, computer, etc.) into the Turntable via the LINE IN jack.
- Rotate Volume knob to adjust audio level.

*NOTE:* Turntable & Bluetooth function will automatically be deactivated while using the LINE IN (AUX-IN) function.

**PLEASE NOTE:** The Tone Arm will automatically stop at the end of the record and you must return the tone arm to the arm-rest manually.

