


SAFE & SOUND Model No. ITSS-9300

PORTABLE SAFE

The Portable Safe can be used in a permanent location just like a conventional safe or carried when traveling and secured in a vehicle or in a suitable location at your destination. Simply passing the steel cable around a suitable fixed securing point and locking the cable end in place prevents the safe being opened or removed by unauthorized people.

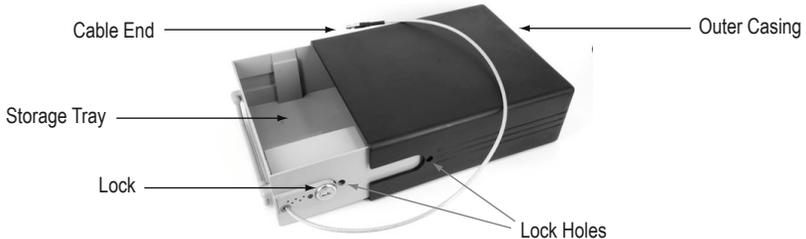

Installing the Battery

- (a) Ensure the Portable Safe is unlocked and the cable end is removed completely from the lock hole.
- (b) Pull out the storage tray and locate the battery cover on the inside of the storage tray. Remove the battery cover.
- (c) Gently pull the battery connector from inside the battery compartment and fit a high quality 9 volt (MN1604/6LR61) ALKALINE battery (not included).
- (d) Push the battery into the battery compartment and refit the battery cover (if the battery is not fitted correctly then the battery cover may not close properly - ensure battery is fully inserted into the battery compartment).

Using the Portable Safe

1. Place your possessions in the storage tray of the Portable Safe. If you are storing an iPad (or similar tablet PC) or very small objects such as jewelry you must use the shelf card provided. Place the shelf card on the side supports inside the storage tray, ensuring it is completely **flat**. If storing an iPad (or similar tablet PC), fit the shelf card first and then place the iPad on the shelf card with the screen facing **downwards**. Gently push the storage tray back into the Portable Safe's outer casing until the lock hole in the storage tray aligns with the lock hole in the outer casing. Please note: If the storage compartment is too full then the tray may not close properly and you will have to remove or rearrange certain of your items.
2. Guide the cable around a fixed secure object, for example a water pipe, a railing, a bed frame, part of a vehicle chassis or heavy furniture.
3. Insert the end of the cable into the lock hole (make sure that it goes in all the way) and whilst holding the cable end still in place turn the key to lock it in position - you have just locked the cable and set the alarm. If the alarm sounds then the cable is not fully in the lock hole and you should turn the key back into the unlocked position and push the cable end in the lock hole further before trying again.
4. To test the alarm prior to use turn the key to the locked position without inserting the cable into the lock hole - the alarm siren should sound within a few seconds. If it doesn't then you should change the battery.

TROUBLESHOOTING

Alarm doesn't sound or only makes a "clicking" sound when activated

Check you have a high quality Alkaline battery installed. Check battery life.

When key is turned with the cable inserted in lock hole the alarm sounds

Ensure the storage tray is fully inserted into the outer casing and the two lock holes are aligned. Ensure cable end is inserted all the way into the lock hole. You may also need to hold cable in lock hole at the same time as turning the key.

Disclaimer: The Portable Safe has been designed as a deterrent against theft. The manufacturer or supplier cannot accept any liability for personal injury, property damage or loss.

Warning: The Portable Safe has a very loud siren which may cause ear damage if used at close range and/or for prolonged periods of time. Do not hold close to ears and keep away from children.

SAFE & SOUND Model No. ITSS-9300

Innovative Technology Electronics Corp.

Limited Warranty: 90 Days Labor, One Year Parts

Innovative Technology Electronics Corp. (IT) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. IT agrees, within the initial "90 Day" period, to repair or replace the product if it is determined to be defective at "No Charge". It is further agreed that IT will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

To obtain service, the purchaser MUST present an original sales receipt / proof of purchase. Please contact us at www.ithomeproducts.com to request an RMA (Return Material Authorization) number to return products for service or replacement. Returns without an RMA number on the package will be refused and returned to sender. Upon receipt of the returning item and our full inspection (IT) may issue a replacement to customer for the same item or of one that has equivalent value and features. To return an item, supply full name, return address, phone number, item purchased, receipt of purchase and reason for return to obtain RMA number.

All returns must be in the original packaging or reasonable substitute to prevent damage.

Customer "Must" include full name, shipping address and telephone number inside of package. No return will be shipped back to a PO Box or APO address.

Please include your check or money order in the amount of

- **USD\$5.00 for items \$10.00 to \$39.99 (Price Paid Per Unit)**
- **USD\$10.00 for items \$40.00 to \$99.99. (Price Paid Per Unit)**
- **USD\$16.00, for items \$100.00 and up. (Price Paid Per Unit)**
- **Shipping fees are non-refundable**

to be payable to Innovative Technology Electronics Corp.(for handling and return shipping charges) (IT) will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any / all of the necessary information.

Send all inquiries or RMA request via our website www.ithomeproducts.com/support.

Innovative Technology Electronics Corp.

1 Channel Drive

Port Washington, NY 11050

Toll free: 1-877-483-2497

Website for support: www.ithomeproducts.com/support

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER, (IT) SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.