



Wet/Dry Trimmer Model # ITST-28

What's Included:

1. Wet/Dry Trimmer
2. Storage Cap
3. Blade Cleaning Brush



Care and Use Instructions:

To turn the unit on, press the ON/OFF switch. Press again, to turn unit off.

To clean, use the included Blade Cleaning Brush to carefully wipe away any debris from around the trimmer blades.

To replace the battery (not included), remove the Battery Compartment Cover by turning counter-clockwise and pulling away from the unit. Replace the old battery with a new "AA" size battery. Make sure to insert the battery according to the correct polarity. Replace the Battery Compartment Cover.

CAUTION: Use with care. Keep out of reach of children.

For warranty information and customer service:

Toll-Free Phone: 1-877-483-2497

Website: www.ithomeproducts.com/support

Made in China.