

Operation Guide to Open/Repair the CD Tray for the ITVS-760B



1. Gently use a flat, thin piece of metal (paper clip, needle-nose pliers, end of a pair of tweezers, screwdriver, etc.) to push the bottom of the outer CD door.



4. Using the flat piece of metal, push the silver button to allow the inner CD door to open.



2. Use your finger to pull down the outer CD door. This will allow the outer CD door to open in order to access the inner CD door.



3. Locate the small, silver rectangular button under the CD deck to force open the inner CD door. (shown in the image above.)



5. If the inner CD door does not open completely, gently pull out the inner CD door by hand or carefully with a pair of needle-nose pliers.

